

ROV Serial Command Definitions

UART

decimal number	command description
255	Read battery voltage
254	Read temperature
253	Perform leak test

I2C Battery

decimal number	command description
1	Read cell #1
2	Read cell #2
3	Read cell #3
4	Read cell #4
4	Battery monitor address (write)
5	Battery monitor address (read)

I2C LED

decimal number	command description
14	LED controller address (read)
15	LED controller address (write)

I2C Gripper Controller

decimal number	command description
16	Gripper controller address (write)
1	Update lead-screw value
2	Update servo tilt value
4	Update servo claw value

I2C MS5837 Module

decimal number	command description
236	MS5837 address (write)
237	MS5837 address (read)